

Lawinen-Verschütteten-Suchgerät
Avalanche Transceiver
Appareil de recherche de victimes d'avalanche
Localizzatore A.R.T.VA.
Aparato de búsqueda de víctimas de avalanchas

S1
SCANNER

Gebrauchsanleitung
Manual
Mode d'emploi
Istruzioni per l'uso
Instrucciones de uso


ORTOVOX
www.ortovox.com




ORTOVOX



**SCAN
+ FIND**

Scanning the avalanche track for transmitters and locating each signal quickly and exactly are the decisive advantages of the ORTOVOX avalanche transceiver S1. An immediate search with an avalanche transceiver and a rescue using avalanche shovels and a probe that is carried out by the tour participants themselves offers the best chance of survival for an avalanche victim. When third party help has to be called to the scene it usually arrives too late! Pay attention to the avalanche report and select safe routes. Always take the avalanche transceiver S1 with you together with the necessary **ORTOVOX SAFETY PRODUCTS** such as an avalanche shovel and a probe. Read the S1 operating instructions carefully and practice both the handling of your avalanche transceiver S1 and avalanche search procedures.

Information on ORTOVOX products and safety notices can be found on the ORTOVOX website at www.ortovox.com

Contact us by e-mail at ortovox@ortovox.com

ORTOVOX wishes you wonderful, safe tours!

CONTENT

Operating elements	01
Technical data	36
EU Declaration of Conformity	36
QUICK REFERENCE	37
Signal search, coarse search, fine search, pinpoint location	40
Extended operating instructions	46
MENU	47
Daily function test	50
Locating several avalanche victims	52
Acoustic emergency reception	56
Interference	60
Battery change	61
Warranty	62
Service	63
Index of key words	64
Service addresses	164

www.ortovox.com

Current avalanche warning service information!

TECHNICAL DATA

DEVICE DESIGNATION: ORTOVOX S1

FUNCTION: digital with acoustic emergency operation

CASING: ergonomic, waterproof, impact-resistant

DIMENSIONS: 120 x 80 x 30 mm (closed);
215 x 80 x 30 mm (open)

FREQUENCY

Transmitting: 457 kHz

The S1 can receive signals from any standard avalanche transceiver with no limitations

DIGITAL RECEPTION RANGE: up to 60 m

SEARCH STRIP WIDTH: up to 50 m

TEMPERATURE RANGE: -20° C to +45° C

IF THE TRANSCEIVER GETS WET, DO NOT USE DIRECT HEAT, I.E. SUCH AS A HAIR DRYER; TO DRY IT OUT, HEAT APPLIED IN SUCH A DIRECT MANNER MAY PERMANENTLY DAMAGE THE DEVICE BEYOND REPAIR.

POWER SUPPLY:

3 alkaline AAA Mignon 1.5 V LR 03 batteries

OPERATING TIME

TRANSMITTING: about 250 hours

RECEIVING: about 15 hours

WEIGHT: approximately 245 g incl. batteries,
carrying case approximately 120g

SELECTABLE; ADDITIONAL FUNCTIONS

- Infrared interface
- Compass
- Inclinator: 0 – 60°
- Thermometer: -20° to +45°C

EU DECLARATION OF CONFORMITY

Manufacturer:

X-log Elektronik GmbH

Responsible person:

Johann Nowotny,
Bahnhofstr. 95,
D-82166 Gräfelfing

declares that the product:

Type: **ORTOVOX**

Model: **S1**

Intended Purpose:

Searching for avalanche victims when used as intended satisfies the basic requirements in accordance with Article 3 of the R&TTE guidelines, Directive 1999/5/EC, and that the following standards have been applied:

1. Health

(Article 3.1.a of the R&TTE guidelines)
ETS 300 718 issue: 05/01

2. Safety

(Article 3.1.a of the R&TTE guidelines)
ETS 300 718 issue: 05/01

3. Electromagnetic compatibility

(Article 3.1.b of the R&TTE guidelines)
ETSI EN 300 718-1
issue: 05/01

4. Efficient use of the radio frequency spectrum

(Article 3.2 of the R&TTE guidelines)
ETSI EN 300 718-2
issue: 05/01

5. Electromagnetic compatibility and radio spectrum matters

(Article 3.3.e of the R&TTE guidelines)
ETSI EN 300 718-3
issue 2004/02

Gräfelfing, July, 26, 2010

(City/date of the Declaration of Conformity)

p. p. Andrea Reintges

(name)

The ORTOVOX S1 surpasses the high requirements of European standard EN 300 718.

INFORMATION FOR THE USER:

Changes or modifications to this device not approved by ORTOVOX can void the users authority to operate the equipment.

FCC ID KF5ORTOVOXS1


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) the device may not cause harmful interference and (2) the device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for an intentional radiator pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

QUICK REFERENCE FOR THE ORTOVOX S1 AVALANCHE TRANSCIEVER**WEARING THE PROTECTIVE CASE**

Hold the shoulder strap on the protective case by the silver-coloured application and place this over your head and shoulder. Pull the free end of the strap around your back and connect to the case using the snap buckle.

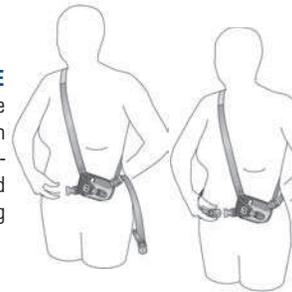**SWITCH ON AND OFF****SWITCH ON**

Turn ON/OFF switch (1) clockwise 90°.

The transmission monitoring lights (6)

are now flashing. When the battery capacity is between 99 and 75%, 3 short acoustic signals are emitted; between 74 and 50% battery capacity, 2 short acoustic signals are emitted; between 49 and 25% battery capacity, 1 short acoustic signal is emitted and if the battery capacity is less than 25%, a continuous alarm signal is emitted. If the equipment self-test was not able to be completed positively, a warning signal is emitted at regular intervals.


**SWITCH OFF**

Turn ON/OFF switch counter clockwise 90°.



TO OPEN

Take the S1 from its protective case, press the release button (5) on the left side and then open the S1 unit.

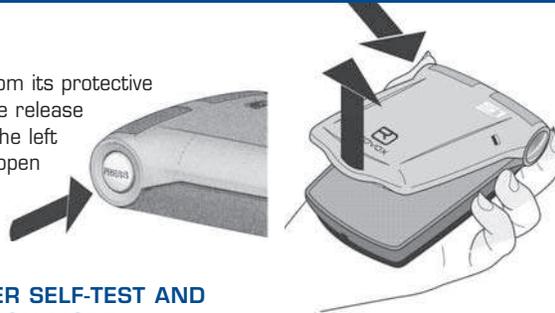

TRANSCIEVER SELF-TEST AND TRANSMISSION MODE

When the device is opened up, once the S1 has been switched ON the transceiver self-test can be watched on the display. Symbols for transmission, reseption, additional functions and battery capacity are confirmed with ticks. The sensors on the S1 for measuring temperature, slope and the earth's magnetism are calibrated. Close S1 after a positive transceiver self-test. This switches the S1 to transmission mode.



If an error function or fault is detected, the warning triangle appears.

ERROR MESSAGE

During the self-test the transmit and receive functions, the sensors and the battery capacity are tested. An error message is shown on the display with the warning triangle next to the checked function; in addition 5 warning signals sound. An error message can be triggered by the imme-

diate proximity to another transmitting avalanche transceiver, mobile phone, wireless device, large metal parts or strong magnetic field.

What the most important error messages mean:

E0001: transmitter	E0004: magnetic sensors
E0002: receiver	E0008: slope sensors
E0003: transmitter and receiver	

If one of the above or another error message is displayed, then carry out the self-test again in the open in surroundings without interference. When doing so, it is essential to make sure that no other transmitters are nearby. Switch off all sources of interference (mobile phones, wireless devices etc.) or move them well away.


If the malfunction is displayed again, then send this avalanche transceiver to the ORTOVOX service department.

People wearing a heart pacemaker are recommended to wear the S1 on the right side of their body. It is essential to observe the pacemaker manufacturer's instructions!

The S1 will now transmit and the transmission indication lights on the side (6) will flash.

RECEIVE = SEARCH

Press the release button (5) on the left side of the beacon and open the S1. The search situation will be displayed automatically on the screen (7).

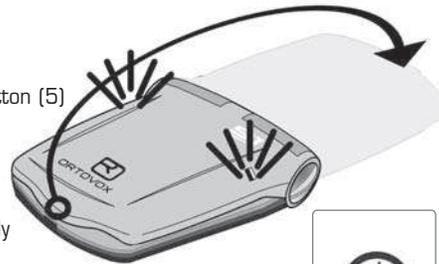


ORTOVOX recommends switching off mobile phones and radio equipment when locating!



SIGNAL SEARCH:

Turn the S1 left and right through an angle of approx. 30° during the SIGNAL SEARCH (= search for the first signal) and tilt it moderately up and down. This compensates for particularly unfavourable positions of the transmitting antenna and the signal can be picked up even earlier. If there is no transmission signal being received then the screen will automatically display instructions to carry out a signal search. Search the avalanche track in search strips of 50 m !


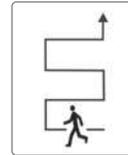


COARSE SEARCH:



Hold the S1 in a horizontal (flat) position during the search!

At approximately 60 m distance from the victim the victim symbol will appear on the display screen (7) with the digital measurement (i.e 55).

The searcher aims the vertical line to the middle of the victim symbol and then moves towards the victim. The acoustic signal from the loudspeaker will sound faster as the distance reduces and thus confirm the measurement result.

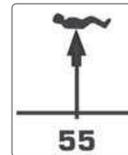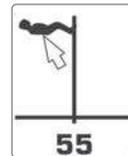

If the S1 again has to determine the initial signal, the instruction to pivot the S1 appears on the display.

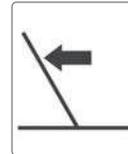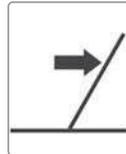

The distance to the victim is now 20 m. Two further victims are shown at distances of 25 m and 30 m by a small icon. The nearest victim (large icon) at a distance of about 20 m remains targeted. When there are several people searching, each of the signals displayed can be targeted and simultaneously located by the other searchers.



FINE SEARCH WITH TENDENCY INDICATION:

The patented circular illustration with tendency indication on the S1 makes fine search considerably easier, faster, and more precise. The process of fine search begins automatically at a distance of 3m. The searcher is approaching the victim: the arrows show towards the center of the circle (tendency indication). The closer he comes to the victim the faster the acoustic signal sounds.





Hold the S1 steady in front of you. Do not turn the S1 during fine search!

The searcher is approaching the victim: the distance is 2m, the circle becomes smaller and the arrows are pointing to the center of the circle.

The searcher is moving away from the victim. The circle becomes larger, the arrows are pointing outwards as the distance increases. The previously achieved, closer position is stored and is referenced by the inner, lighter circle shown on the screen.


The searcher is once again approaching the victim. The circle is becoming smaller, the arrows are pointing to the center and the distance to the victim is reducing.

The victim has been located at a depth of 0.3 m. No smaller numbers and no smaller circles are visible.

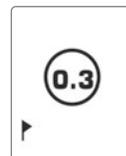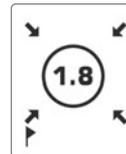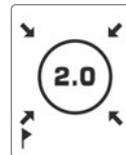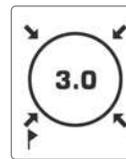


Pinpoint search and probing

Mark the exact point with the probe.

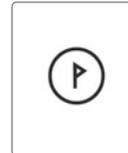

Mark

To mark the located person, the "OK- button" (2) is pressed **once**.

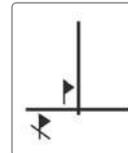


The marking flag appears in the display where the located person is buried.

Cancelling marking

The marking of the last person located can be cancelled by pressing the "OK-button" (2) again. A new fine search can be started immediately.

If a second (third) victim is within a 3 m radius, the signal first found cannot be cancelled. In this case the fine search of other victims continues in a consecutive manner as circle icons appear giving their specific respective distances, should the situation arise.

If the victim is shown behind where you are standing, then change direction by 180°, home in on the victim again and walk towards the victim.

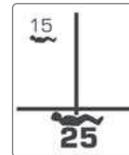


Deep burial

In the case of a burial depths of 3.0 to max. 7.0 m, fine search is triggered by crossing the fine search area twice.


You will know that the area is being crossed when the distance indicator first drops to approx. 4 to 7 m and then rises again when you continue walking. Turn around and watch again how the indicator first drops and then increases. After turning around again the fine search indicator appears and you can determine the exact position as usual by using the grid search.

Marking a transmitter at a depth of more than approx. 6 – 7 m is not possible - in this case the victim's position is found by determining the smallest distance indication. After that, every victim shown on the display can be homed on, located and marked.

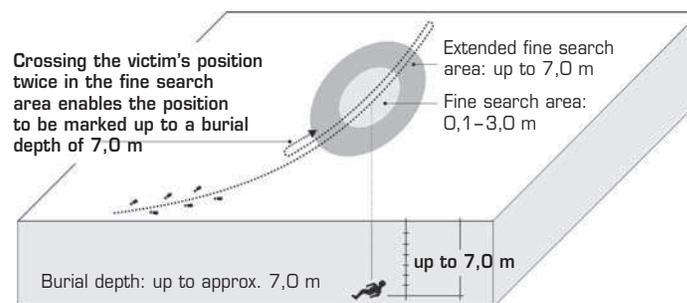

Simultaneous location of two victims by 2 rescuers

The S1 display shows the relative position and distance of the avalanche victims. Each of the transmitters displayed can be homed on and thus directly located. 2 rescuers can locate the homed on transmitter independently of each other and thus save valuable time when rescuing the victims.

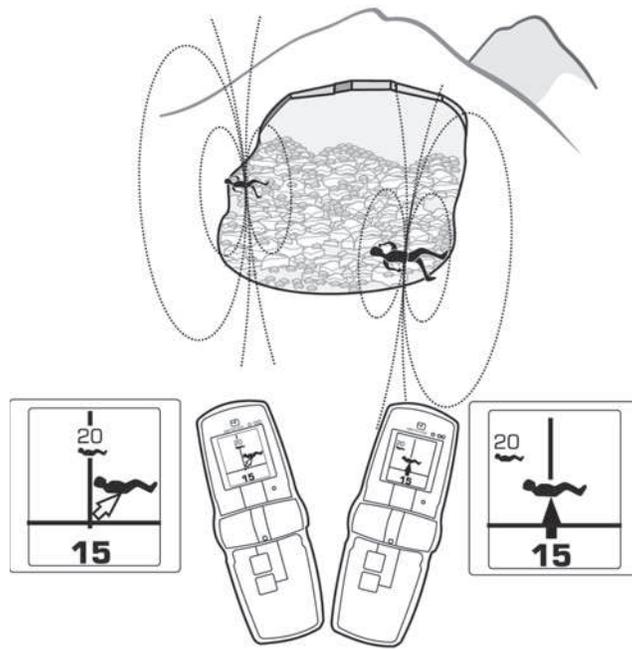


EXTENDED OPERATING INSTRUCTIONS FOR THE AVALANCHE TRANSCIVER ORTOVOX S1

TRANSMISSION AND AUTOMATIC SAFETY SWITCHBACK FOR TRANSMIT (MOTION SENSOR):

If the S1 is motionless for 90 seconds while open then the transmission mode will be automatically activated from every function depending on the setting selected. In the event of a subsequent avalanche the S1 switches to transmission after 90 seconds (factory setting; time can be set at 30, 60 and 120 seconds via the "settings" menu).


SIGNAL SEARCH (= search for first signal):

Move through the presumed search area in stripes with a width of 50 m while ensuring 25 m distance from the side edge of the avalanche.

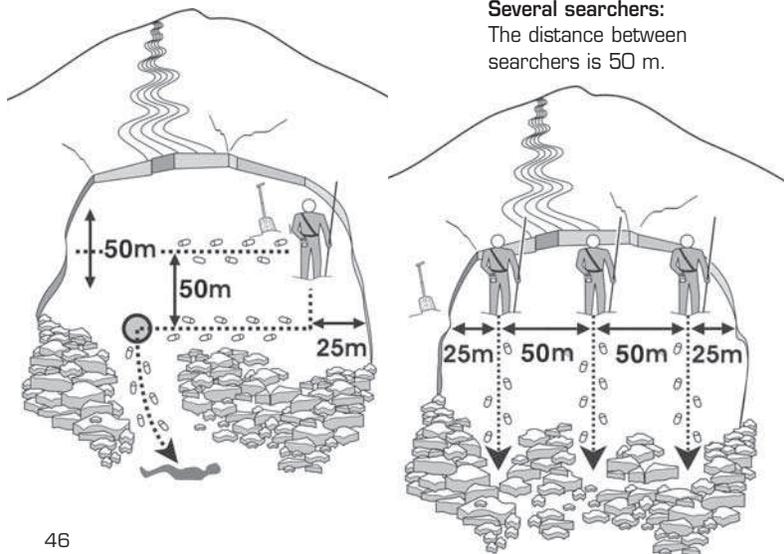

MENU

- Accessing the menu: Press  for more than 3 seconds
- Select function: Press  several times
- Confirm function: Press 

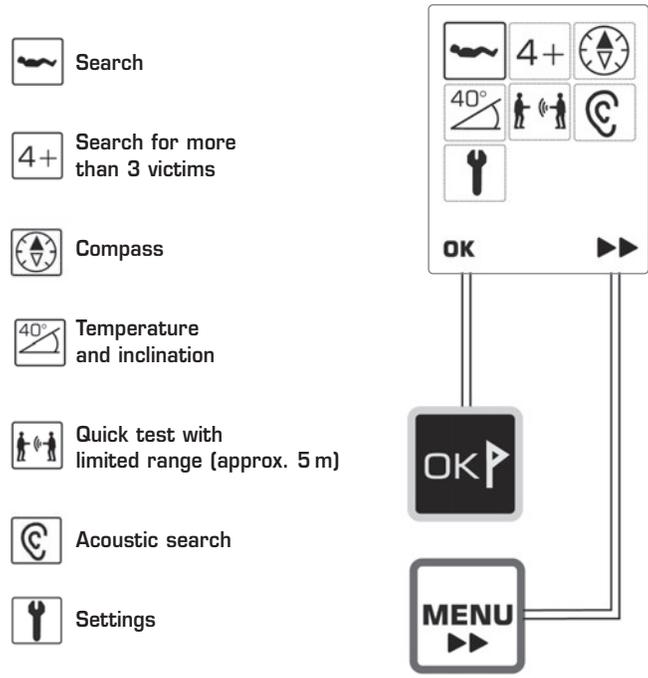

STATUS DISPLAY

If the S1 detects 4 or more victims (=multiple burials), the "4+" icon appears on the status line of the display



The searcher is requested to select the function from the menu.




Warning in case of low battery



Warning in case of fault




Warning: Automatic transmission switch over is switched off.


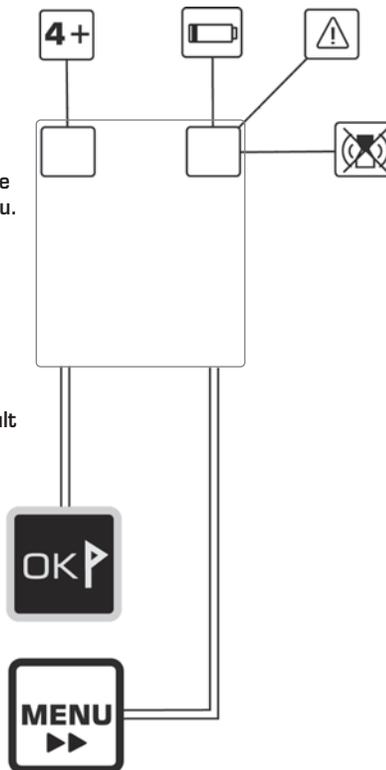


SOFTKEYS

The keys  and  have several functions. The softkeys show the respective key function:

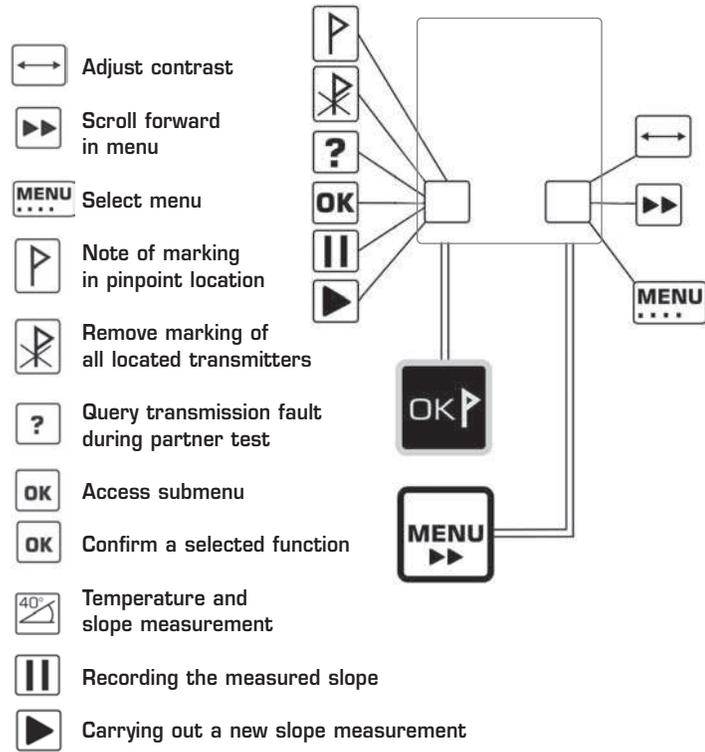


The S1 allows the temperature and the slope angle to be measured.

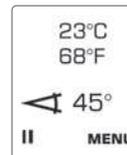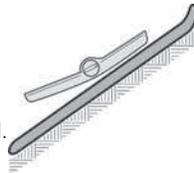

Measuring the slope:

The tolerance of the slope sensors at 30° (degrees) can be up to +5°. The determined measurement can be kept by pressing the "OK" button (2). A new measurement can be taken by pressing the "OK" button (2) again.

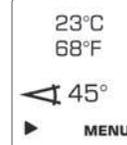

DAILY FUNCTION TEST BEFORE STARTING A TOUR!

Checking the receivers:

- All participants set their S1 to 'RECEIVE'.
- A group member (preferably the group leader) sets his/her S1 to 'TRANSMIT'.
- If all group members have acoustic and optical reception then the group members' receivers are working, as is the transmitter of the group leader.
- The group leader now moves away from the group until no group member is still receiving a signal.
- The group members see the increase in distance of the group leader on their displays and can thus test the reception range of their S1.


Checking the transmitters:

- The group leader opens his S1 (=reception position). The group members close their S1 (transmission position) and pass the group leader's receiver ONE BY ONE at a distance of 20 m.

At the same time, the fine search is tested approaching under 3m!

QUICK TEST with limited range (test of the transmitters)

The group leader sets his/her S1 to "transmit test" via menu item  (= limited range).

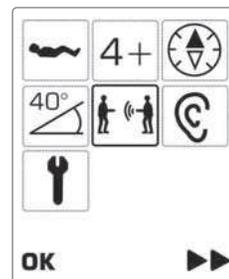

If the S1 receives an audible (via the loudspeaker) and visible signal (circle with 2 persons) from each individual avalanche transceiver then the transmission function of the units to be tested and the reception function of the group leader are in order.



If a fault turns up on the checked device then the warning triangle appears on the display. The warning triangle signals a serious device fault on the checked device.




Possible faults can be queried by pressing

the  -button (2).

Deviation from the

- Transmission frequency (457 kHz)
- Transmission period
- Period length

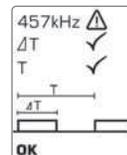


Go back to the short test using the  -button (2).

If a fault is displayed please send your transceiver directly to your ORTOVOX service office for inspection (see page 164).

LOCATING SEVERAL AVALANCHE VICTIMS (SIGNAL SEPARATION):

The S1 separates the signals automatically.

Once the fine search of the first victim is finished, this signal can be marked by pressing the "OK-button" (2). Instead of the victim symbol, a flag now appears where the victim is buried. At the same time the symbol for the next nearest victim is enlarged.

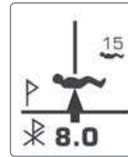

This marking can be cancelled by pressing the "OK" button (2) to check the fine search again if necessary. (This is not possible if several victims are transmitting within a 3 m radius.)

It is necessary to have a short pause between the signals. It may take slightly longer to be able to separate three or more signals due to signal overlap. The receiver needs adequate time to differentiate between each additional transmitted signal. Thus it is practically impossible to separate more than 3-4 signals within a reasonable time and to show them on the display. The S1 therefore automatically reduces its range until the number of signals has been reduced to a quantity that can be displayed in a reasonable time.

IMPORTANT NOTES REGARDING SIGNAL SEPARATION:

Thank you for purchasing the Ortovox S1 employing the most innovative technology amongst our avalanche beacons. You will find its unique visual representation and the advanced signal separation technology very helpful while searching for one or even more buried persons. Nonetheless, we want to draw your attention to some important aspects of search, especially in multiple-burial scenarios, and their physical background:

In real avalanche accidents, frequently two or more persons are buried with their beacons transmitting at the same time. Sometimes, and unpredictably, two or even more beacons are transmitting their impulses exact-

ly simultaneously for a longer period of time. The transmitted signals of two analog beacons with long pulse durations or digital beacons transmitting simultaneously overlap and mix up. Frequently they can no longer be separated for physical reasons. In such an overlap state, a single transmitter's signal cannot be measured, neither using analog nor digital technology. Unfortunately, such an overlap state can continue for 30 or more seconds in some cases. It is necessary to wait until two overlapping impulses are drifting apart. Using the Ortovox S1, you can solve this physically determined problem applying the following three search strategies:

1. **Switch to the 4+ Mode and use micro search stripes with a width of at most 5 m or 16 ft (cf. p.54)**
2. **Use the Ortovox sector search strategy (cf. p.55).
You can combine this strategy with the 4+-mode.**
3. **Switch to the acoustic search mode (cf. p.56)**

Advice: If the number of buried persons is not known or unsure, for safety reasons it is required to use one of the before mentioned methods to detect and locate potential further buried persons.

For detailed information please visit our website at www.ortovox.com


Select "4+" mode to locate more than 3 transmitters

Access the menu  with the key and select the function 

When several transmission signals interfere with one another, a location procedure is not possible. Therefore the stop sign appears for a few seconds. Wait until stop hand disappears and then continue to locate!



When there are more than 3 to 4 transmission signals, you will see "4+" top left. Access this function with the "menu" button (3).

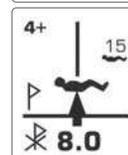

Function "4+"

The full range (approx. 50m) is available for locating the first signal. After marking the first signal the range is limited to approx. 5m.

Consequently the search strips should be reduced to a width of 5 m. The restriction to a 5 m search strip width is shown by two black bars on the side of the display.




Two methods for locating multiple victims:

- micro-search stripes
- ORTOVOX sector method

MICRO-SEARCH-STRIPES

Once the 1st victim has been located and rescued by helpers, the search stripes have to be set at 5 m intervals. The avalanche area is searched for victims in this way. The S1 now scans circular areas with a diameter of max. 10 m and every victim in this circle is shown.

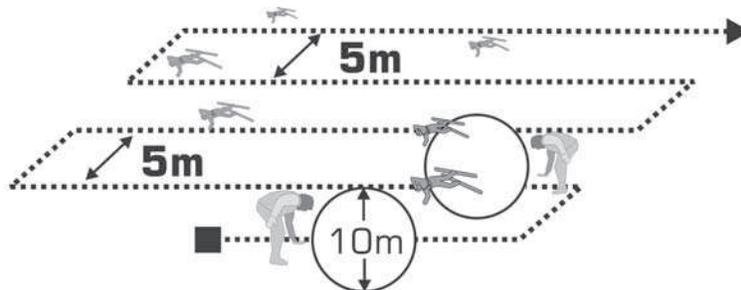

ORTOVOX-SECTOR-METHOD

1st sector: Once the 1st victim has been located and rescued by helpers the surrounding area is searched by sectors.

2nd sector: approaching from left.


3rd sector: approaching from right.

4th sector: approaching from underneath.


Before each approach in a new sector, the "4+ mode" must be restarted via the menu.

Caution:

It is, of course, possible to get a bearing on signals that have already been located. The searcher should then concentrate on signals that have not yet been marked in the avalanche area.

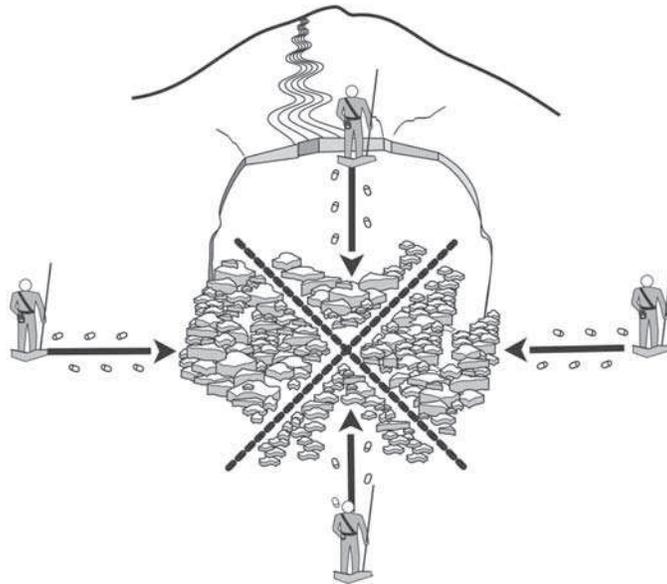

ACOUSTIC EMERGENCY RECEPTION (SAFETY SETTING)

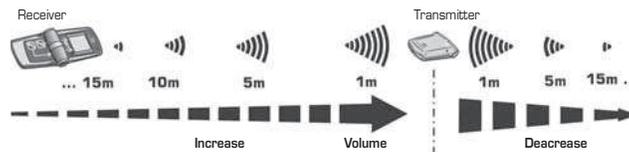

The ORTOVOX safety emergency reception allows an acoustic search even when the batteries have almost completely run out. When a battery change has been delayed (remaining capacity less than 10 %), sensors and display are automatically switched off, as the minimum current supply is no longer reached. Now only an acoustic reception is available.

Switching "acoustic emergency reception" on and off

The acoustic emergency reception can (also for training purposes) be switched on at any time by simultaneously pressing the buttons "OK" (2) and "menu" (3) for at least 5 seconds or using the menu heading "Acoustic location".

Switching off the acoustic emergency reception:


Close the S1 and open it again or hold down both the "OK" (2) and "menu" (3) buttons again at the same time for at least 5 seconds. If the battery capacity is very low the S1 is automatically switched to the highest possible reception level for emergency acoustic reception. The 'OK' button is used to reduce the signal. The 'menu' button is used to increase the volume level. After initial reception the loudspeaker will sound the transmission signal. TURN the S1 in order to determine the direction with the strongest reception. Now the searcher will move in this direction for 5 m, reducing the volume if necessary. Then the searcher once again turns the S1 to the direction with the highest volume and again moves 5 m in this direction. The volume increases as the searcher moves closer to the avalanche victim. During the fine search (= lowest reception level) do not turn or tip the S1. Now mark the point in the longitudinal direction with the loudest signal. A search is also made for the loudest signal to the right and left of this point. The avalanche victim is located at the point with the loudest signal.



SETTINGS

The following settings can be queried, selected or changed via the menu symbol

- Loudspeaker
- Motion Sensor settings
- Information about device number, software version, receiver function and battery capacity
- Display contrast setting
- Update
- Compass calibration

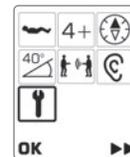


Loudspeaker

The loudspeaker function can be set to "loud", "medium" and "off".

Switch to automatic transmission (Motion Sensor)

If the S1 is not moved within the period of 30, 60, 90 or 120 seconds, then it automatically switches to transmission mode from whatever mode it is in. A short warning signal is emitted 10 seconds before automatically switching. The switch to automatic transmission is preset at 90 seconds when delivered. The switch to automatic transmission can also be switched off.

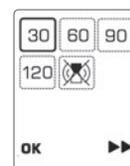

Attention: If the switch to automatic transmission is switched off, then the S1 will NOT automatically switch back to transmission mode if someone is buried by a subsequent avalanche!

Information about device number, software version, receiver function and battery capacity


The sub-menu shows

- device number
- software version
- transmitter/receiver function and
- current battery status



Display contrast setting


The desired contrast is set using the "menu" button (3) and retained with the "OK" button (2).

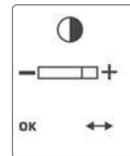

Update

The S1 can be connected to a computer via it's infrared sensors and an additional infrared scanner (accessorie) for:

- update/upgrade
- printout and management of transceiver's functions

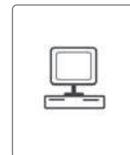

For more information click www.ortovox.com

COMPASS CALIBRATION


To display the direction as fast as possible the ORTOVOX S1 uses an electronic compass. We recommend "calibrating" the compass before the start of every winter season and after changing the battery. Any compass discrepancy occurring is compensated by calibration. For calibration purposes, use **only a flat surface without metal parts**. The distance from electricity conducting leads or metal parts, particularly magnetic objects (loudspeakers) should be at least 2m.

Method of procedure

1. Place the S1 on a flat, horizontal surface without metal parts (display faces upwards).
2. Select the "Settings" symbol from the "MENU".
3. Select the calibration symbol.
4. Press the "OK button", wait for approximately 2 seconds until calibration starts.
5. Turn the S1 in a horizontal position slowly (5 - 10 seconds) once around its own axis (360°). Wait for beep.



6. Turn over the S1. Display faces downwards.
Battery compartment is visible. Wait for beep.

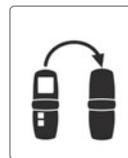

7. Turn over the S1 again.
Display now faces upwards again. Wait for beep.
The calibration process is finished.



Note: After each battery change the S1 requests calibration after the self-test.

Now press the "OK button" (calibration starts).
Continue as from Point 5.



By pressing the "MENU" button the calibration can be rejected and carried out at a later point in time. In this case the S1 reminds you to calibrate at every restart.



INTERFERENCE IN TRANSMITTING AND RECEIVING PERFORMANCE

Interference to the transmission and reception performance can be caused by lightening, lifts and power plants, radio equipment, mobile phones and other electronic equipment. Mobile phones and radio equipment should be switched off whilst searching. The minimum distance between two avalanche transceivers and to metal, radio equipment, mobile phones, magnets etc. should be at least 50 cm.

CHANGING BATTERIES

(when the equipment is switched off)

Remove the screw from the battery compartment on the back of the S1 and remove the batteries from the battery shaft using the strap.

Always insert 3 new AAA 1.5V LR 03 batteries of the same make. Check the correct position of the positive and negative poles. Use only brand name batteries. No rechargeable batteries and no lithium batteries.



SEPARATING THE PROTECTIVE CASE FROM THE AVALANCHE TRANSCEIVER AND ATTACHING THE WRIST STRAP

The protective case can be separated from the avalanche transceiver for cleaning purposes. The wrist strap can be attached in place of the protective case.



For safety reasons, ORTOVOX only recommends using the supplied protective safety case when wearing the beacon!

IMPORTANT INFORMATION!

Remove the batteries from the avalanche transceiver during the summer months. The ORTOVOX factory guarantee is invalid by damage due to battery leakage. Never use rechargeable batteries (rechargeable batteries such as Ni-Cd cells). Rechargeable batteries have significantly lower operating voltage, and thus lower range and limited service life. In addition defective rechargeable batteries cannot be detected immediately. Once they have been recharged they show full battery voltage, however they can drop off to 0 after extremely short service (life threatening hazard!). If you delay changing batteries (capacity <10%), the micro-processor, the distance display, and direction display will switch off. In such case, approximately only twenty hours of emergency analog transmit operation and one hour of emergency receive operation are possible.

STORAGE

After the tour take off the S1 and store it in its switched off status in a well-ventilated dry location. Most often, the well-designed casing prevents condensation for the most part. To ensure that the device will function for several years we recommend a gentle drying of the carrying system and the avalanche transceiver, itself. If your transceiver gets wet, do not use direct heat, i.e. hair dryer, to dry it out. Heat applied in such a direct manner may cause permanent damage. Protect the avalanche transceiver from excessive moisture or excessive heat. Protect the batteries from cold temperatures.

WARRANTY

When purchasing a new ORTOVOX Avalanche Transceiver, on presentation of the filled out warranty card (see instructions for use) and dealer invoice we grant the 5-year ORTOVOX guarantee from the date of purchase, but no longer than 6 years from the date of manufacture.

The number IV/15 on the seal in the battery compartment means, for example: ORTOVOX guarantee valid until 4th quarter 2015; the appliance was manufactured 5 years earlier in the 4th quarter 2010. The seal also gives a reminder of the recommended transceiver test in the 4th quarter 2015.

As part of the ORTOVOX guarantee, faulty parts are repaired free of charge or the avalanche transceiver is replaced by a beacon of the same design. Damage caused by improper handling and natural wear is excluded. In the case of damage due to battery leakage, the ORTOVOX guarantee is voided. Batteries are excluded from the guarantee. Any further warranty and consequential damage are expressly excluded. Enforced guarantees do not extend the guarantee obligation nor does a new guarantee period begin.



Warranty expiry date
IV/15 (= 4th quarter 2015)

Recommended appliance test:
2015

SERVICE

The ORTOVOX S1 is a rescue device. Its perfect operation might be crucial for life. To ensure your unit is functioning properly, send the device for factory inspection according to the dates shown on the test seal.

Please use our inspection service in the summer months, so that your device will be ready for operation when winter starts.

For repair or factory inspection please send the avalanche transceiver directly to our service center (see page 164).

IMPORTANT INFORMATION!

Avalanche transceivers are designed to support the assistance offered by companions in the event of avalanche burial! Your presence in areas where avalanche hazards exist is fraught with potential risk; only remain in such areas in the company of experienced participants. Effective use of an avalanche transceiver requires appropriate training and constant practice. Wear your avalanche transceiver close to your body under your outer clothing. ORTOVOX strongly recommends that you carefully read the operating instructions provided with the avalanche transceiver. Always take a shovel and a probe when you go off-piste in areas where avalanche hazards exist, and never tour alone. Give due consideration to worldwide, current Please check the avalanche reports prior to planning your off-piste activities at: www.ortovox.com

Before you travel in an area where an avalanche hazard exists, ensure that all avalanche transceivers are functioning properly and that all batteries are in good operating condition.

The S1 fulfils the highest safety requirements and is characterized by its clear and uniquely simple illustration of the search situation on the graphic display!

INDEX

A	
Acoustic emergency reception (Safety setting)	56
Acoustic search	47, 56
Automatic transmission switch (motion sensor)	46, 57
B	
Battery	36
Battery capacity	38, 58
Battery change	61
Button menu	47
Button OK	47
C	
Coarse search	40
Compass	36, 47
Conformity (EU declaration)	36
D	
Daily function test	47, 50
Deep burial	43
Device number	58
Display contrast setting	58
E	
Extended operating instructions	46
Error	38
F	
Fine search	41
Frequency	36
G	
Guarantee Card	66
I	
Inclinometer	47, 50
Infrared-sensors	58
Interference	60
L	
Loudspeaker	57
M	
Marking	42
Marking (cancelling)	42
Menu	47
Micro-search stripes	54
Multiple victims [„4+Mode“]	54
O	
Open	38
Operating elements	01
Operating time „receive“	36
Operating time „transmit“	36

P		Status display	48
Pinpoint search	42	STOP sign	53
Printout and management		Storage	62
of functions	58	Switch OFF	37
Protective case	61	Switch ON	37
Q		T	
Quick reference	37	Technical data	36
Quick test	47, 51	Thermometer	36, 47
R		Transmission Indication lights	37
Range	36	Transmission (and automatic	
Receive/search	39	safety switchback for transmit)	46
Receiver function	58	U	
Rechargeable battery	61	Update	58
Refining location	40	Upgrade	58
S		W	
Search	39	Warning triangle	38, 48
Search stripe width	36, 40, 46	Warranty	62
Sector method	55	Wrist strap	61
Selectable, additional functions	36, 47		
Self test	38		
Service	63		
Service Center	164		
Settings	47, 57		
Signal overlap	52		
Signal search	40, 46		
Signal separation	52		
Softkey	49		
Software Version	58		

GUARANTEE CARD

Name _____

City, State, Zip _____

E-mail _____

Telephone _____

Model **ORTOVOX S1**

Serial number _____

(inside of battery compartment lid)

Purchased at _____

Address _____

City, State _____

Please provide below a **detailed** explanation and description of your unit's faulty performance!!!!

In case of service please fill out this card and send it to the responsible ORTOVOX service center (see page 164).

IMPORTANT!

Please hold in
safe keeping



ORTOVOX
www.ortovox.com

